



4F-1, 236, Fu-Te 2nd Rd., His Chih,

Taipei Hsien, 221, Taiwan

TEL:886-2-6616-6692 · 2694-6687

FAX:886-2-2694-6875 · 2694-5097



Tel: (336) 288-1613 | eMail: sales@jortlink.com
support@jortlink.com

C180 II Mainboard Changing Process


Version: 1.0
May 20, 2014



Revision History :

Version	Date	Page	CONTENTS
1.0	May, 20 2014		First release

1. Dismount two screws on the bottom of side panel (see red arrows below)

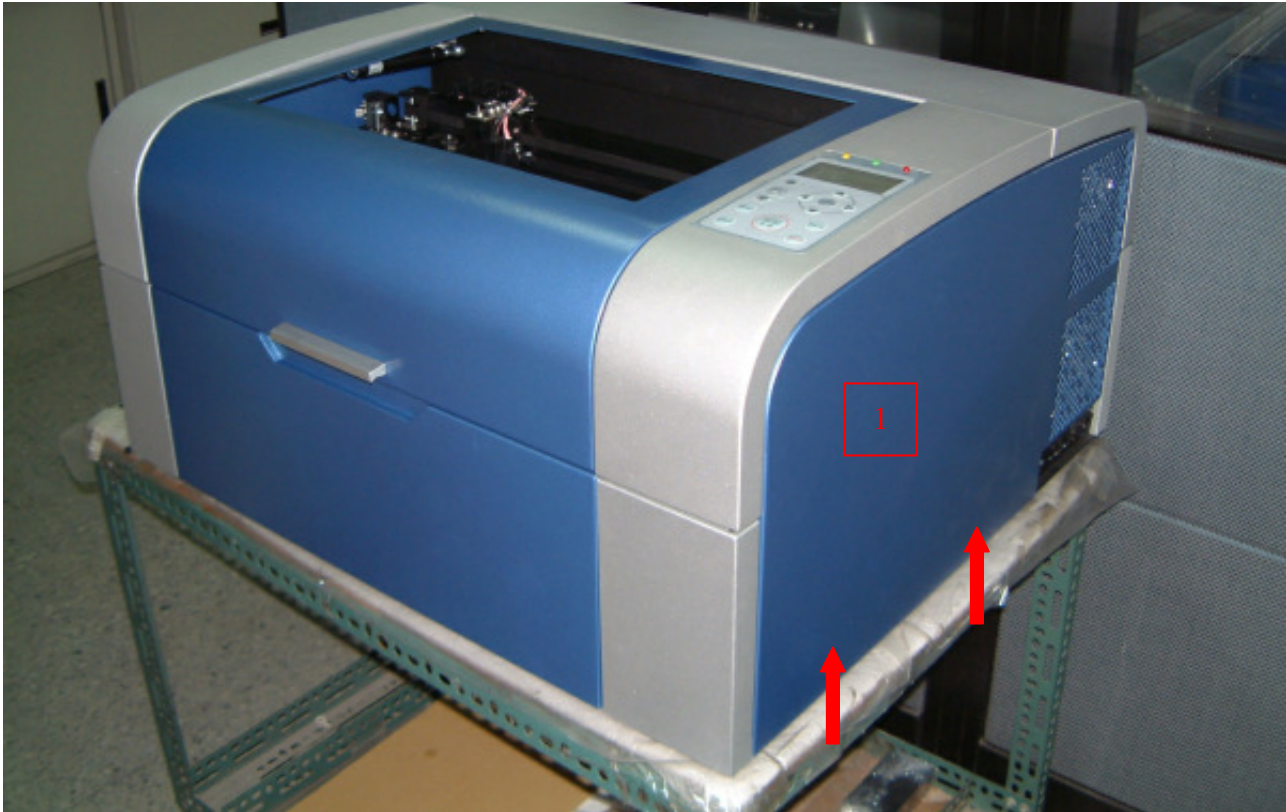

2. Dismount 7 screws (see red arrows below) and remove all cables connecting to main board and can change new main board.

