



4F-1, 236, Fu-Te 2nd Rd., His Chih,

Taipei Hsien, 221, Taiwan

TEL:886-2-6616-6692 · 2694-6687

FAX:886-2-2694-6875 · 2694-5097



C180 II X motor changing process

Version: 1.0

May 20, 2014


Revision History :

Version	Date	Page	CONTENTS
1.0	May, 20 2014		First release

1. Dismount two screws on the bottom of side panel (see red arrows below)




2. Dismount two screws of right-front cover (M3 *2)

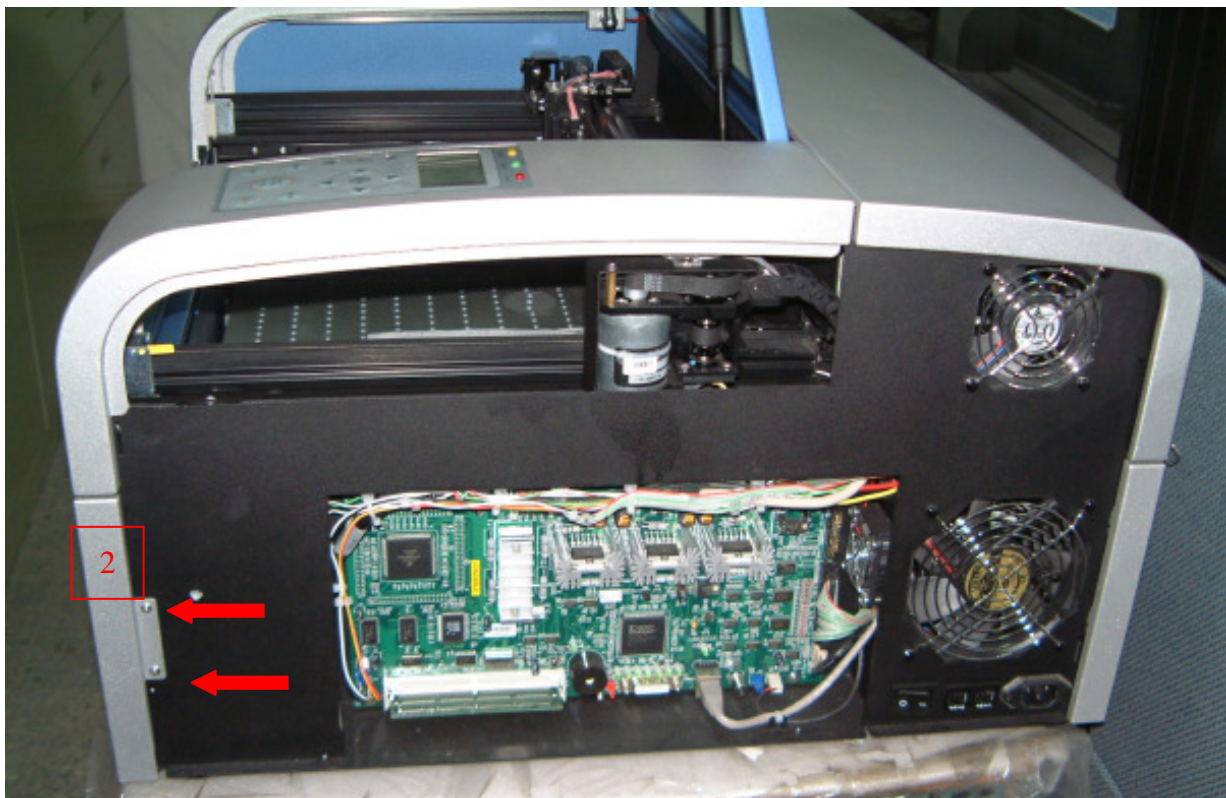


3. Dismount 4 screws of back cover (M3 *4)




4. Dismount right window cylinder

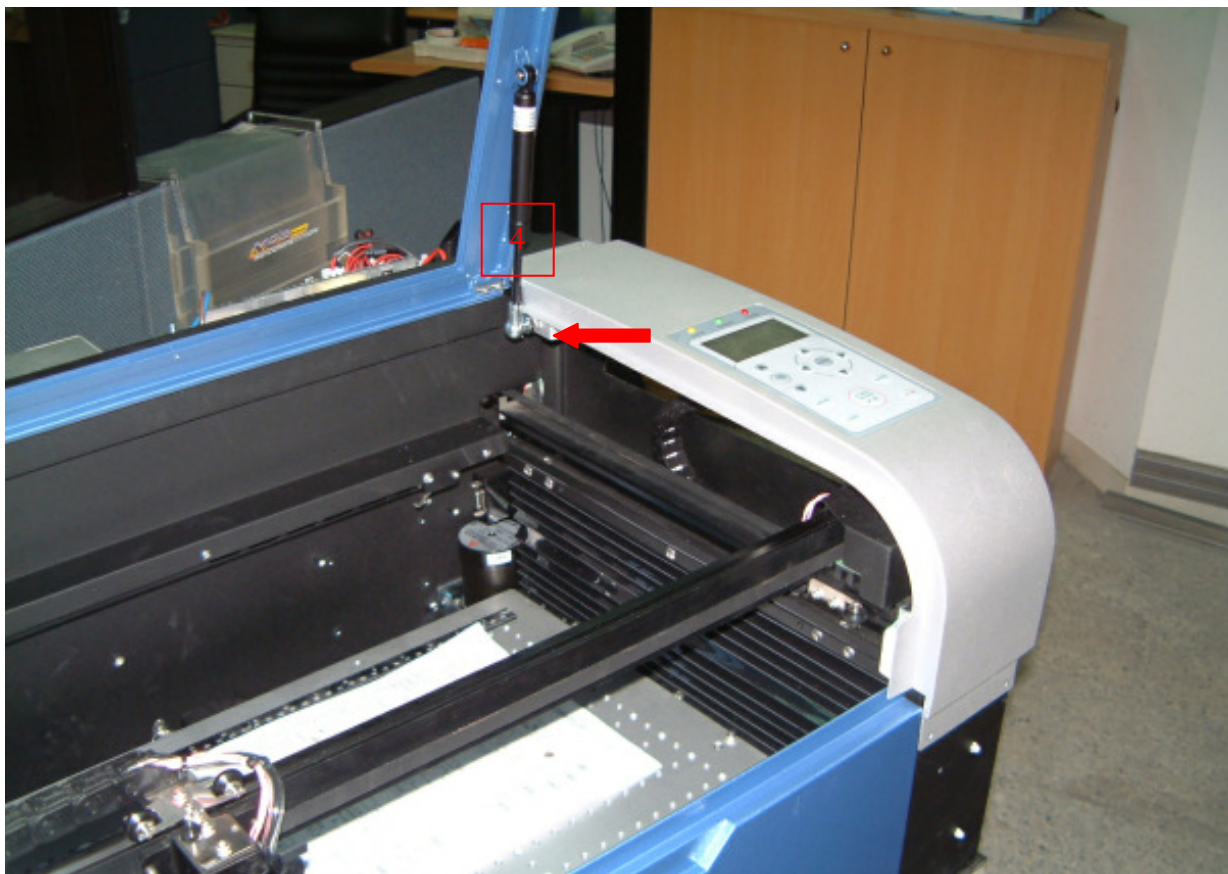


5. Dismount 4 screws of right top cover (where the control panel locates)

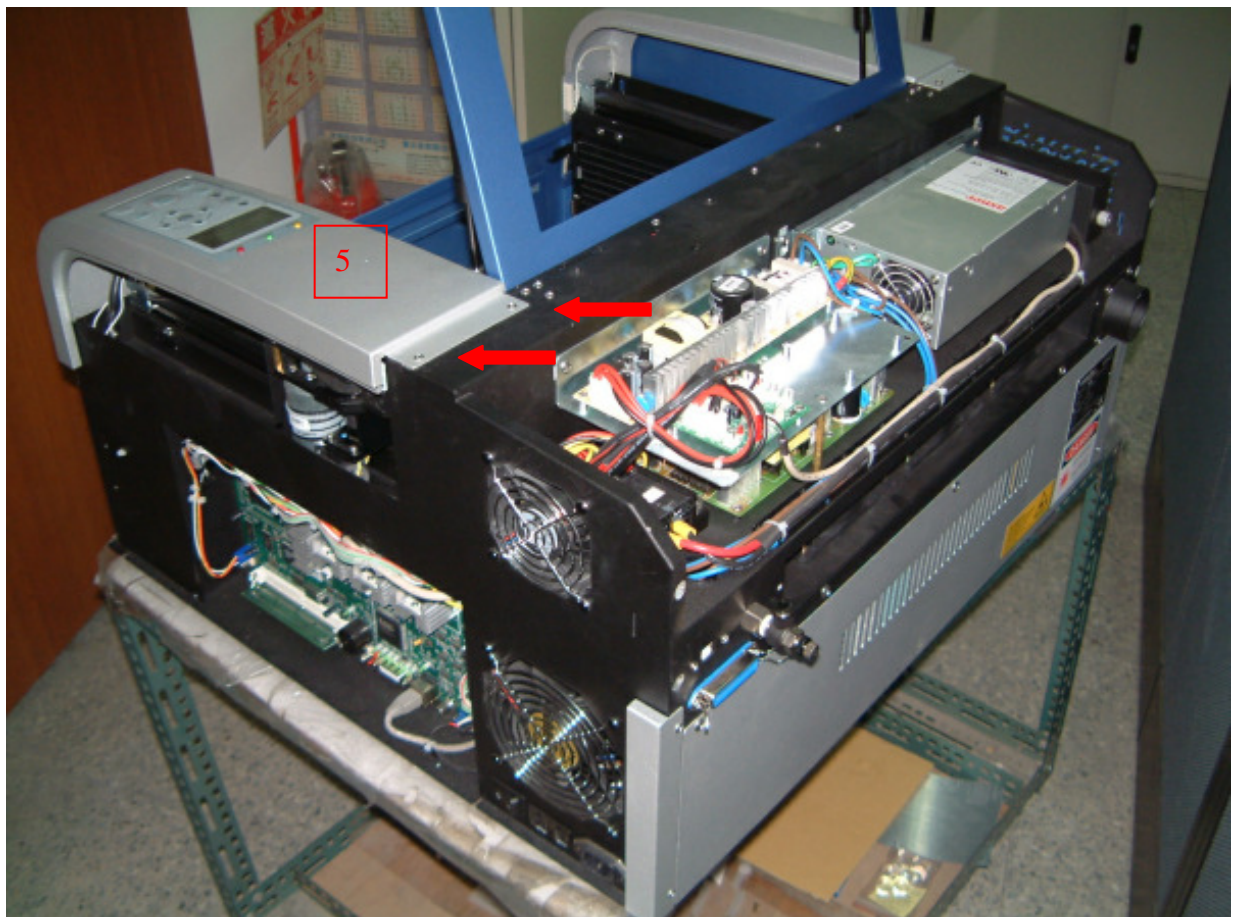


6. Hanging the right top cover to the right side.

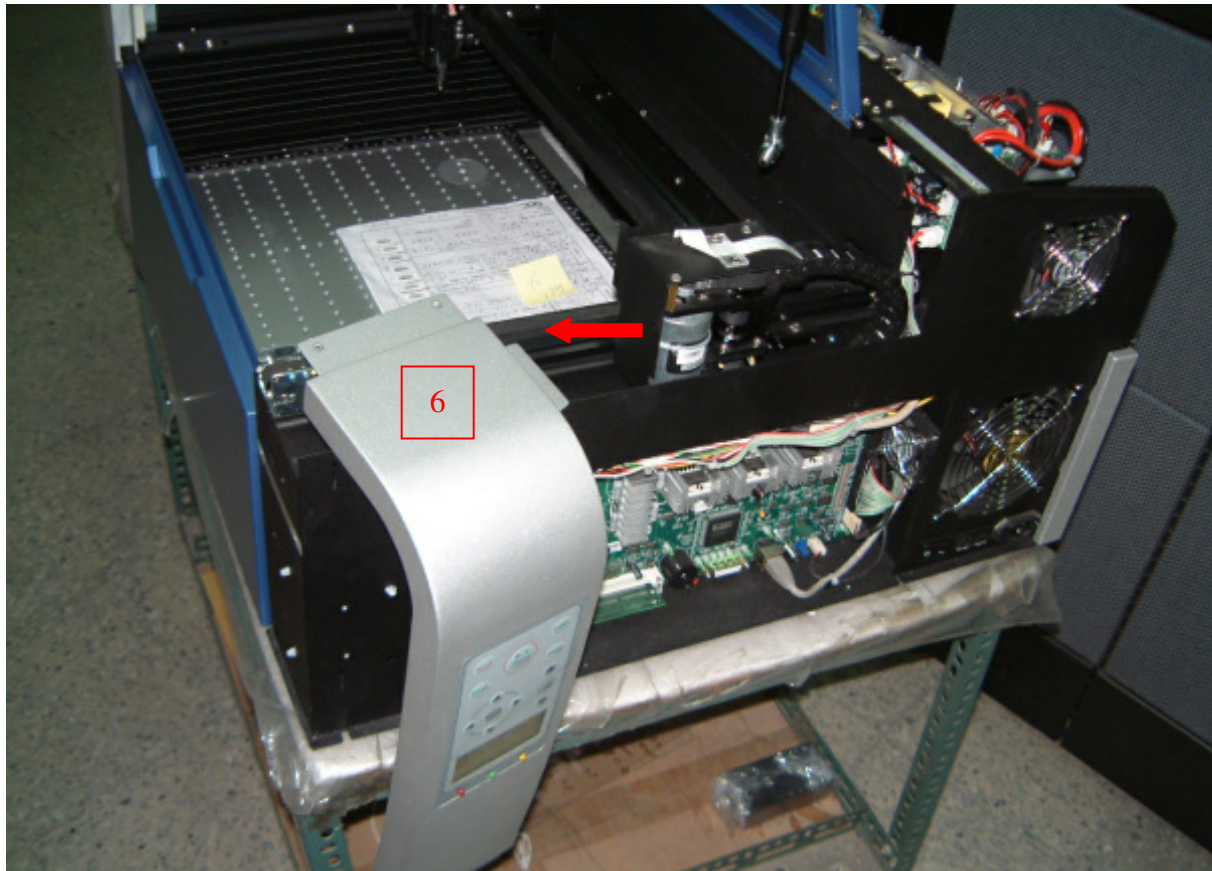


7. Dismount 4 screws of x motor cover (M3 *4)

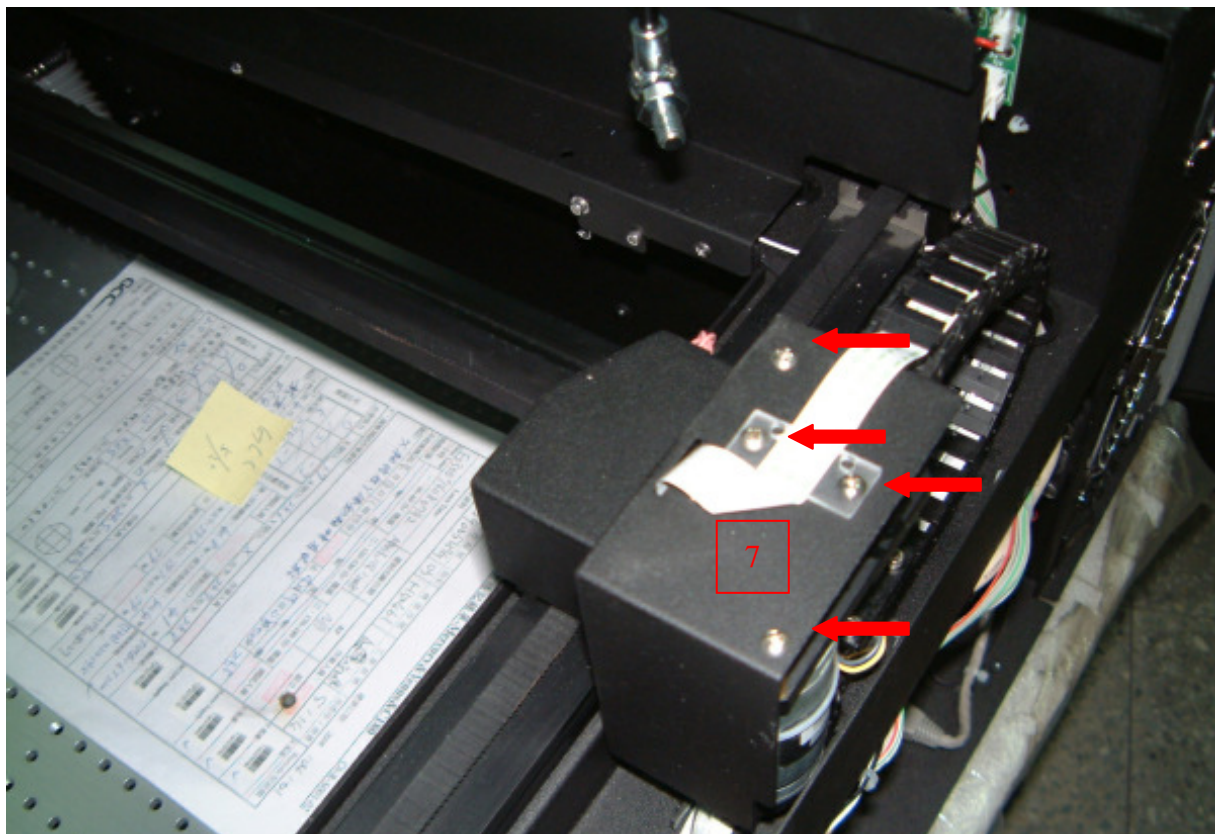


- 8-1. Dismount 4 screws of x motor (M4 *4, red arrow below:) and the x motor cable be removed and changed.
- 8-2. For changing auto focus cable, first remove the auto focus cable from x motor pcb (see red circle below).

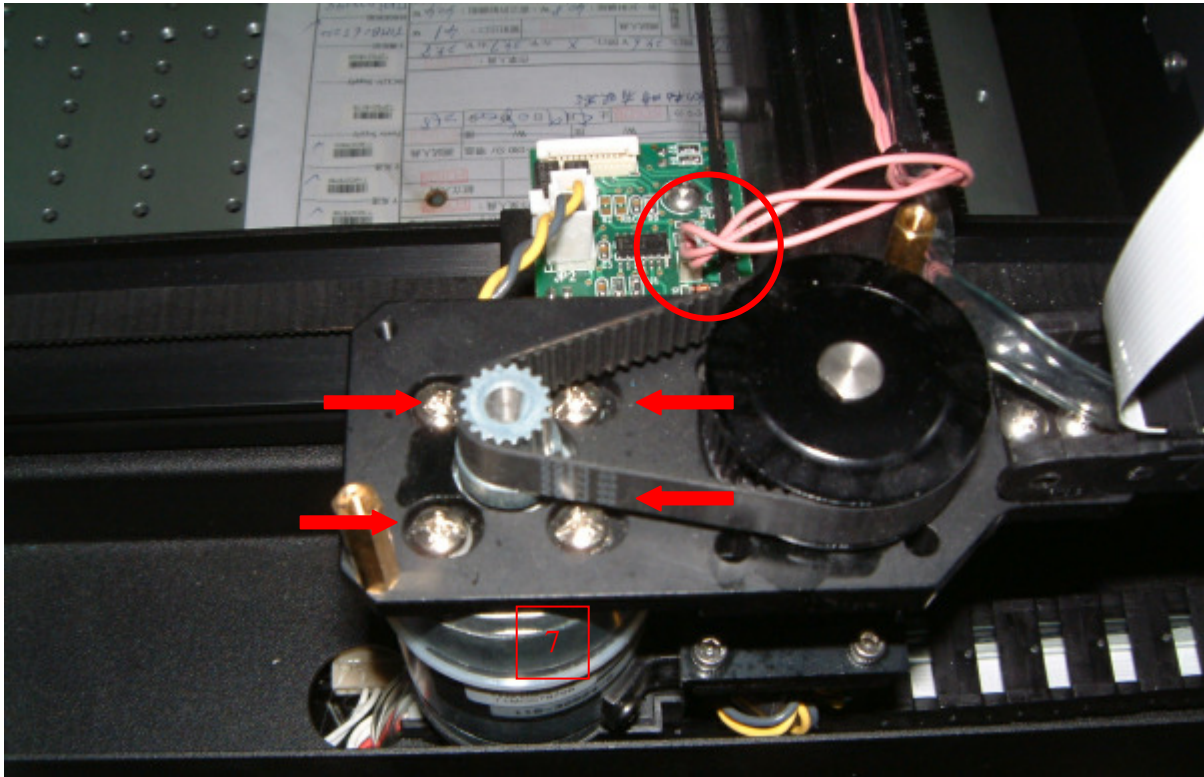

- 8-3 On lens carriage side, remove the auto focus cable also (it is tight, so use tweezers will be helpful).

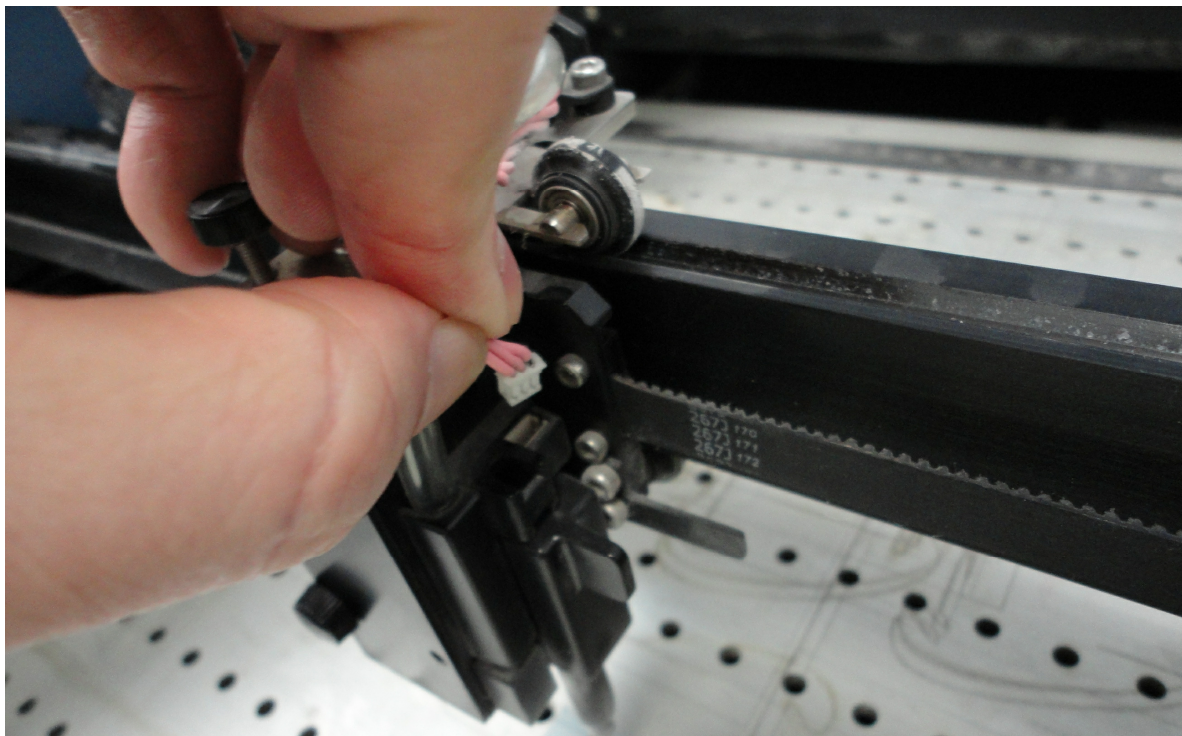

9. Pull out some joint will be easier to change auto focus cable.

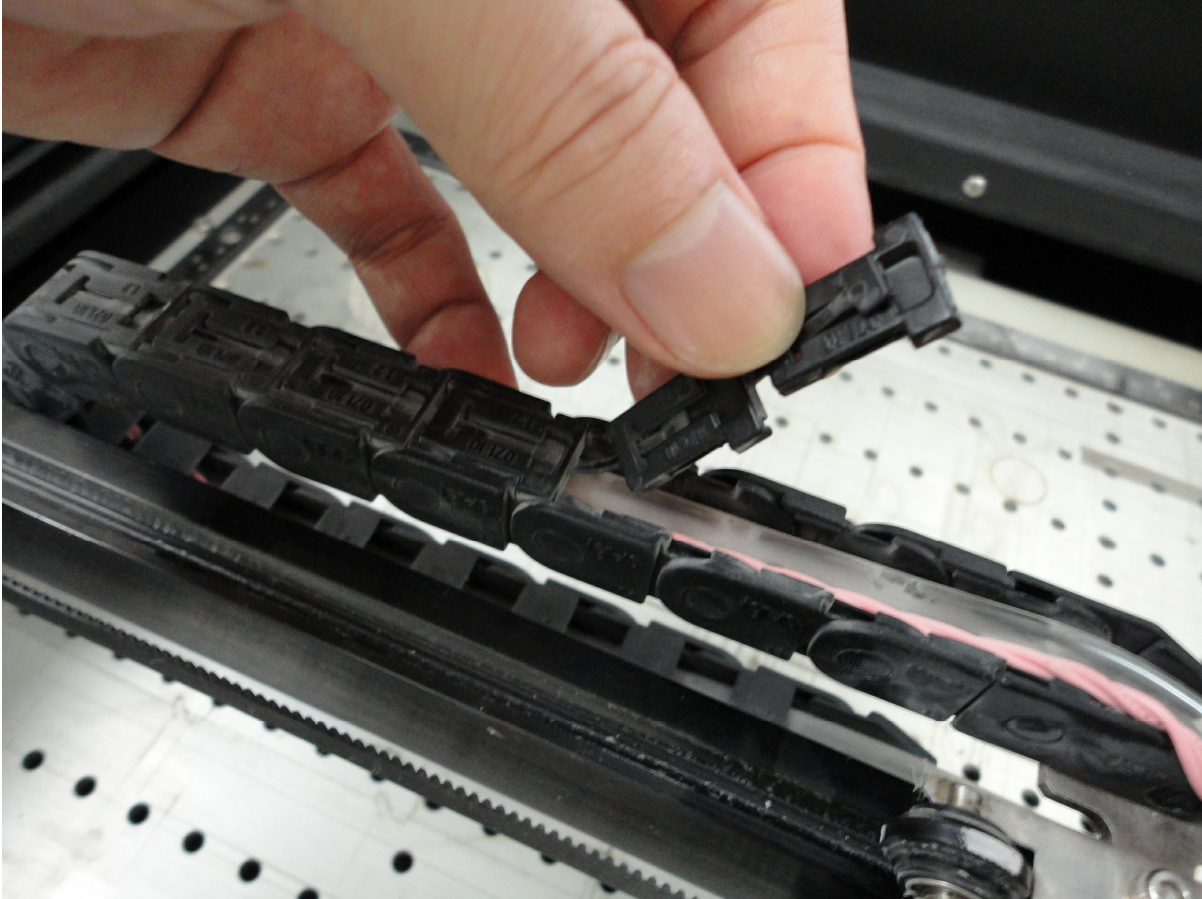

JORLink  **.com**

Tel: (336) 288-1613 | eMail: sales@jorlink.com
support@jorlink.com